

## Installation instructions



Refer to installation use and maintenance manual for more information.



## Brushless AC Servo drive technical data :

**VANADIO**  
AC - SERVO - DRIVES

- AC power supply: 85-265Vac monophase or triphase
- DC logic supply: 24 Vdc (mandatory and isolated)
- Phase current: continuous up to 5.2 Arms (peak of 12 Arms for 2s max with DCmax = 30%)
- Chopper frequency: ultrasonic 40KHz
- Protections against: over current, over/under voltage, overheating, short circuit between motor phase-to-phase and phase-to-ground
- Modbus and Canbus communication interfaces
- Incremental Encoder Input: 5V Differential (RS422) or 5V single-ended TTL/CMOS
- Hall Signals Input: 5V single-ended TTL/CMOS
- Incremental Encoder Output: 5V Differential (RS422)
- Absolute Encoder Input: 5V BiSS-C or SSI interface
- Service SCI interface for programming and real time debugging
- Safe Torque Off (STO) inputs (opto-coupled)
- up to 16 digital inputs (opto-coupled)
- up to 12 digital outputs (opto-coupled)
- up to 2 analog inputs (isolated)
- up to 2 analog outputs (isolated)
- Dimensions: 196.6 x 136.6 x 47 mm (without connectors)
- Protection degree: IP20
- Pollution degree 2
- Overvoltage Category III
- Short Circuit Current : 5 KA;
- Protection Class : Class I Equipment;
- Working temperature 5°C ÷ 50°C; Storage temperature -25°C ÷ 55°C;
- Humidity: 5% ÷ 85% not condensing


error less servo efficient  
technology  
**else**  
by Ever Elettronica

**CANopen**  
**Modbus**

**CE** **UL** **US**



## Mechanical data

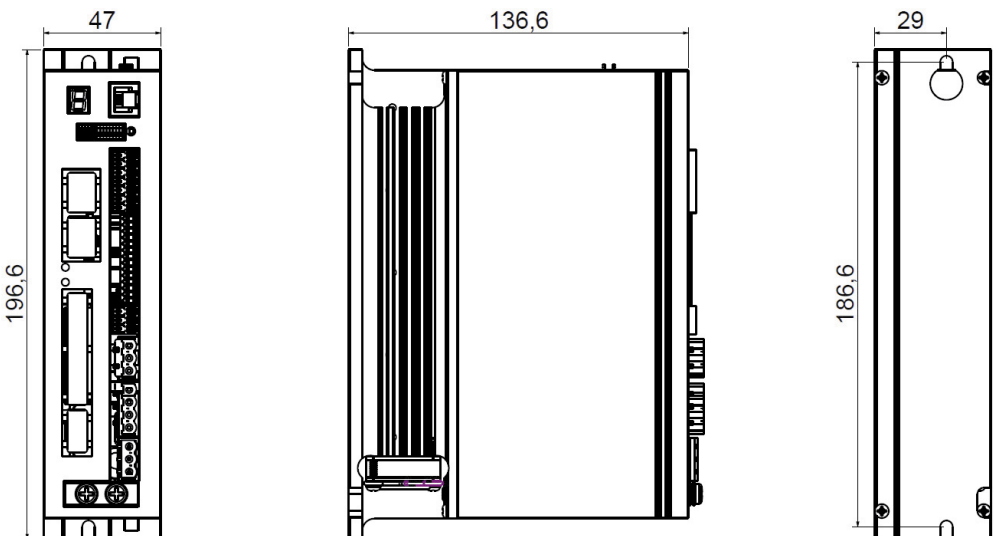


# Models

**MODELS IN THIS SHORT**

| System Code     | Fieldbus          | Digital inputs | Digital outputs | Analog inputs | Analog outputs |
|-----------------|-------------------|----------------|-----------------|---------------|----------------|
| AW5A91K5L221-30 | Modbus and CANbus | 4              | 3               | 0             | 0              |
| AW5A91K5L2E1-30 | Modbus and CANbus | 4              | 3               | 1             | 0              |
| AW5A91K5L2G1-30 | Modbus and CANbus | 16             | 12              | 2             | 2              |

## System connections

Connectors:

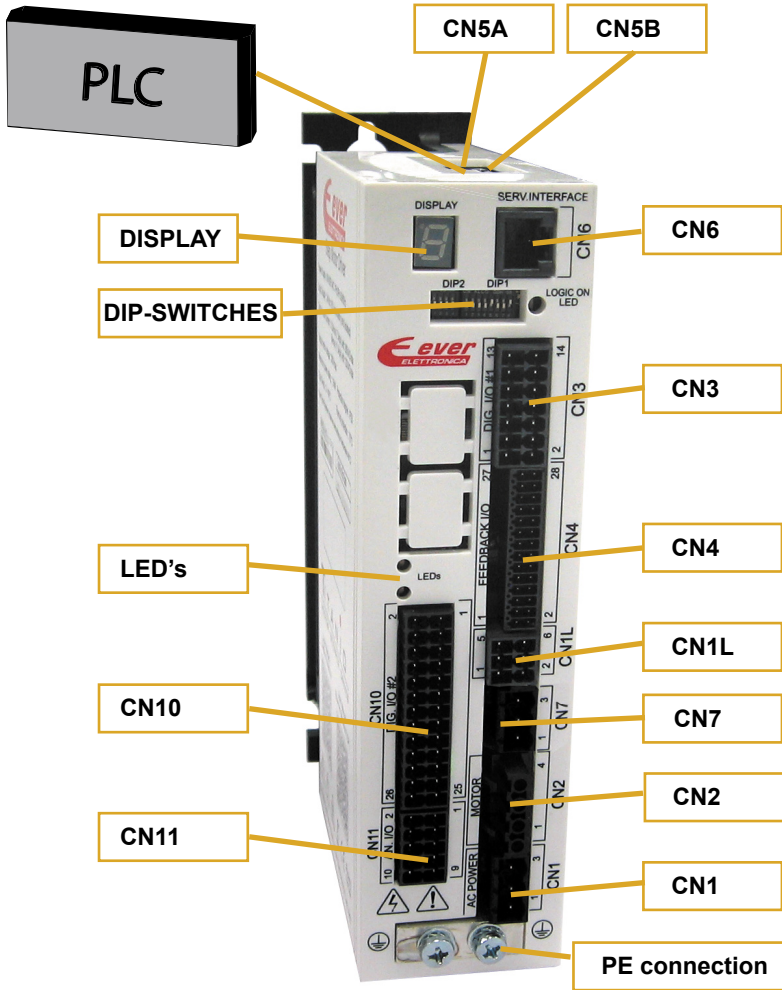


# System connection

## CN1: AC Power supply

3 positions, pitch 5.08mm double row, PCB header connector

|       |      |        |                       |
|-------|------|--------|-----------------------|
| CN1.1 | ACin | PWR_IN | AC power supply input |
| CN1.2 | ACin | PWR_IN | AC power supply input |
| CN1.3 | ACin | PWR_IN | AC power supply input |



## CN7: Braking resistor

3 position, pitch 5.08mm single row connector


|       |         |         |                                 |
|-------|---------|---------|---------------------------------|
| CN7.1 | +DC_BUS | PWR_OUT | DC_BUS output                   |
| CN7.2 | EXT_RES | PWR_IN  | External Braking Resistor input |
| CN7.3 | INT_RES |         | Reserved pin                    |



## CN2: Motor connection

3 position, pitch 5.08mm single row, PCB socket connector


|       |   |         |               |
|-------|---|---------|---------------|
| CN2.1 | V | PWR_OUT | Motor phase V |
| CN2.2 | U | PWR_OUT | Motor phase U |
| CN2.3 | W | PWR_OUT | Motor phase W |



## CN1L: 24Vdc Logic Supply and STO inputs

6 positions, pitch 3.5mm double row, PCB header connector

|        |        |        |                                |
|--------|--------|--------|--------------------------------|
| CN1L.1 | VLOG - | PWR_IN | Negative DC logic supply input |
| CN1L.2 | VLOG + | PWR_IN | Positive DC logic supply input |
| CN1L.3 | STO1 - | PWR_IN | STO1 input negative side       |
| CN1L.4 | STO1 + | PWR_IN | STO1 input positive side       |
| CN1L.5 | STO2 - | PWR_IN | STO2 input negative side       |
| CN1L.6 | STO2 + | PWR_IN | STO2 input positive side       |



**LOGIC 24Vdc MANDATORY and ISOLATED**

## CN6: Service SCI Interface

RJ11, 6P4C, PCB header connector

|       |       |                                       |  |
|-------|-------|---------------------------------------|--|
| CN6.1 | TX/RX | Transmit / Receive Line               |  |
| CN6.2 | DE/RE | Drive Enable Negated / Receive Enable |  |
| CN6.3 | +5V   | +5V power out                         |  |
| CN6.4 | GND   | GND power out                         |  |




**NOTE: This connection is only possible with hardware and software provided by Ever Motion Solutions.**

## CN3: Digital Inputs / Outputs #1

14 positions, pitch 3.5mm double row, PCB header connector

|        |         |         |   |
|--------|---------|---------|---|
| CN3.1  | VSS#1   | PWR_IN  | Negative supply for digital outputs B0 on CN3 |
| CN3.2  | V-OUT0  | PWR_IN  | 24Vdc supply for digital outputs B0 on CN3    |
| CN3.3  | B0_OUT0 | DIG_OUT | PNP digital output B0_OUT0                    |
| CN3.4  | B0_OUT1 | DIG_OUT | PNP digital output B0_OUT1                    |
| CN3.5  | B0_OUT2 | DIG_OUT | PNP digital output B0_OUT2                    |
| CN3.6  | N.C.    | ---     | Not connected                                 |
| CN3.7  | -B0_IN0 | DIG_IN  | Digital input B0_IN0 negative side            |
| CN3.8  | +B0_IN0 | DIG_IN  | Digital input B0_IN0 positive side            |
| CN3.9  | -B0_IN1 | DIG_IN  | Digital input B0_IN1 negative side            |
| CN3.10 | +B0_IN1 | DIG_IN  | Digital input B0_IN1 positive side            |
| CN3.11 | -B0_IN2 | DIG_IN  | Digital input B0_IN2 negative side            |
| CN3.12 | +B0_IN2 | DIG_IN  | Digital input B0_IN2 positive side            |
| CN3.13 | -B0_IN3 | DIG_IN  | Digital input B0_IN3 negative side            |
| CN3.14 | +B0_IN3 | DIG_IN  | Digital input B0_IN3 positive side            |



## CN4: Feedback connection

28 position, pitch 2.54mm double row, PCB header connector

|        |           |         |  |
|--------|-----------|---------|--|
| CN4.1  | SHIELD    | /       | Cable shield connection for feedback interface |
| CN4.2  | SHIELD    | /       | Cable shield connection for feedback interface |
| CN4.3  | N.C.      | ---     | Not connected                                  |
| CN4.4  | N.C.      | ---     | Not connected                                  |
| CN4.5  | DATA-     | DIG_IN  | Absolute encoder data input negative           |
| CN4.6  | DATA+     | DIG_IN  | Absolute encoder data input positive           |
| CN4.7  | CLK-      | DIG_OUT | Absolute encoder clock output negative         |
| CN4.8  | CLK+      | DIG_OUT | Absolute encoder clock output positive         |
| CN4.9  | HALL_C    | DIG_IN  | Hall signal C input                            |
| CN4.10 | HALL_B    | DIG_IN  | Hall signal B input                            |
| CN4.11 | HALL_A    | DIG_IN  | Hall signal A input                            |
| CN4.12 | T_MOT     | AN_IN   | Temperature motor input                        |
| CN4.13 | ENCZ-     | DIG_IN  | Encoder Zero differential input negative       |
| CN4.14 | ENCZ+     | DIG_IN  | Encoder Zero differential input positive       |
| CN4.15 | ENCB-     | DIG_IN  | Encoder Phase B differential input negative    |
| CN4.16 | ENCB+     | DIG_IN  | Encoder Phase B differential input positive    |
| CN4.17 | ENCA-     | DIG_IN  | Encoder Phase A differential input negative    |
| CN4.18 | ENCA+     | DIG_IN  | Encoder Phase A differential input positive    |
| CN4.19 | OVE       | PWR_OUT | Negative side of supply                        |
| CN4.20 | +5E       | PWR_OUT | +5Vdc power supply output                      |
| CN4.21 | OUT_ENCZ- | DIG_OUT | Encoder Zero differential output negative      |
| CN4.22 | OUT_ENCZ+ | DIG_OUT | Encoder Zero differential output positive      |
| CN4.23 | OUT_ENCB- | DIG_OUT | Encoder Phase B differential output negative   |
| CN4.24 | OUT_ENCB+ | DIG_OUT | Encoder Phase B differential output positive   |
| CN4.25 | OUT_ENCA- | DIG_OUT | Encoder Phase A differential output negative   |
| CN4.26 | OUT_ENCA+ | DIG_OUT | Encoder Phase A differential output positive   |
| CN4.27 | OVE       | PWR_OUT | Reference ground for feedback interface        |
| CN4.28 | OVE       | PWR_OUT | Reference ground for feedback interface        |




# System connections

## CN10: Digital I/O #2

26 positions, pitch 3.5mm double row, PCB header connector


|         |           |         |   |
|---------|-----------|---------|---|
| CN10.1  | +24Vdc    | PWR_IN  | 24Vdc supply for digital outputs B1 on CN10               |
| CN10.2  | VSS#2     | PWR_IN  | Negative reference for digital inputs and outputs on CN10 |
| CN10.3  | VSS#2     | PWR_IN  | Negative reference for digital inputs and outputs on CN10 |
| CN10.4  | B0_OUT3   | DIG_OUT | PNP digital output B0_OUT3                                |
| CN10.5  | B1_OUT0   | DIG_OUT | Digital output B1_OUT0 (PNP)                              |
| CN10.6  | B1_OUT1   | DIG_OUT | Digital output B1_OUT1 (PNP)                              |
| CN10.7  | B1_OUT2   | DIG_OUT | Digital output B1_OUT2 (PNP)                              |
| CN10.8  | B1_OUT3   | DIG_OUT | Digital output B1_OUT3 (PNP)                              |
| CN10.9  | B1_OUT4   | DIG_OUT | Digital output B1_OUT4 (PNP)                              |
| CN10.10 | B1_OUT5   | DIG_OUT | Digital output B1_OUT5 (PNP)                              |
| CN10.11 | B1_OUT6   | DIG_OUT | Digital output B1_OUT6 (PNP)                              |
| CN10.12 | B1_OUT7   | DIG_OUT | Digital output B1_OUT7 (PNP)                              |
| CN10.13 | B0_IN8    | DIG_IN  | Digital input B0_IN8                                      |
| CN10.14 | B0_IN9    | DIG_IN  | Digital input B0_IN9                                      |
| CN10.15 | B0_IN10   | DIG_IN  | Digital input B0_IN10                                     |
| CN10.16 | B0_IN11   | DIG_IN  | Digital input B0_IN11                                     |
| CN10.17 | B0_COM_IN | PWR_IN  | Reference common inputs B0 on CN10                        |
| CN10.18 | B1_IN0    | DIG_IN  | Digital input B1_IN0                                      |
| CN10.19 | B1_IN1    | DIG_IN  | Digital input B1_IN1                                      |
| CN10.20 | B1_IN2    | DIG_IN  | Digital input B1_IN2                                      |
| CN10.21 | B1_IN3    | DIG_IN  | Digital input B1_IN3                                      |
| CN10.22 | B1_IN4    | DIG_IN  | Digital input B1_IN4                                      |
| CN10.23 | B1_IN5    | DIG_IN  | Digital input B1_IN5                                      |
| CN10.24 | B1_IN6    | DIG_IN  | Digital input B1_IN6                                      |
| CN10.25 | B1_IN7    | DIG_IN  | Digital input B1_IN7                                      |
| CN10.26 | B1_COM_IN | PWR_IN  | Reference common inputs B1 on CN10                        |



## CN11: Analog I/O


10 positions, pitch 3.5mm double row, PCB header connector

|         |         |         |  |
|---------|---------|---------|--|
| CN11.1  | AVSS    | PWR_OUT | Negative output reference for analog outputs |
| CN11.2  | OUT_AN0 | AN_OUT  | Analog output 0 positive side                |
| CN11.3  | AVSS    | PWR_OUT | Negative output reference for analog outputs |
| CN11.4  | OUT_AN1 | AN_OUT  | Analog output 1 positive side                |
| CN11.5  | -IN_AN0 | AN_IN   | Analog input 0 negative side                 |
| CN11.6  | +IN_AN0 | AN_IN   | Analog input 0 positive side                 |
| CN11.7  | -IN_AN1 | AN_IN   | Analog input 1 negative side                 |
| CN11.8  | +IN_AN1 | AN_IN   | Analog input 1 positive side                 |
| CN11.9  | AGND    | PWR_OUT | Negative output reference for potentiometer  |
| CN11.10 | VPOT    | PWR_OUT | Voltage supply output for potentiometer      |



## JUMPERS - Terminator Resistor

|            |   |
|------------|---|
| Position 1 | 120 ohm resistor INSERTED on Canbus network |
| Position 2 | 120 ohm resistor INSERTED on Modbus network |

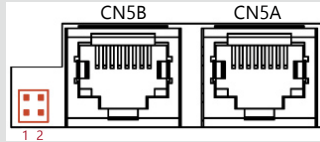

## CN5A and CN5B: CANbus & Modbus Interfaces

RJ45, 8 position shielded, PCB header connector


|       |   |             |                                 |
|-------|---|-------------|---------------------------------|
| CN5.1 | CAN_H                                   | DIGITAL_I/O | Bus Line Dominant HIGH (Canbus) |
| CN5.2 | CAN_L                                   | DIGITAL_I/O | Bus Line Dominant LOW (Canbus)  |
| CN5.3 | CAN_GND                                 | PWR_OUT     | Signal Ground for Canbus        |
| CN5.4 | Data +                                  | DIGITAL_I/O | Positive RS485 signal (Modbus)  |
| CN5.5 | Data -                                  | DIGITAL_I/O | Negative RS485 signal (Modbus)  |
| CN5.6 | Cto Cto between pins 6 of CN5A and CN5B | ---         | IN-OUT for CAN_SHLD (Canbus)    |
| CN5.7 | 0V_A                                    | PWR_OUT     | Signal Ground for Modbus        |
| CN5.8 | Cto Cto between pins 8 of CN5A and CN5B | ---         | IN-OUT for CAN_V+ (Canbus)      |




# Service SCI connection



This connection is only possible with hardware and software provided by Ever.  
Kit code: SW5\_SERV00-SL or SW5-SERV00-EE.

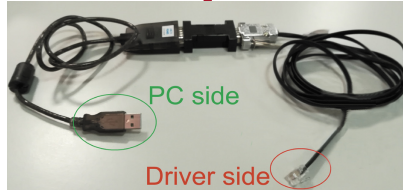

## Dip-Switches settings



**NOTE:** the device reads the Dip-Switches only during the Power up. If it's necessary a setting change, shut down the system, change the settings and start up the system again to make the changes operating.

| Dip-switch allocation |    |     |     |      |     |     |     |     |     |     |     |  |
|-----------------------|----|-----|-----|------|-----|-----|-----|-----|-----|-----|-----|--|
| DIP2                  |    |     |     | DIP1 |     |     |     |     |     |     |     |  |
| U1                    | U0 | ID6 | ID5 | ID4  | ID3 | ID2 | ID1 | ID0 | BD2 | BD1 | BD0 |  |
| 1                     |    |     | 4   | 1    |     |     |     |     |     |     | 8   |  |

| Drives's Baud Rate selection |     |     |                 |                 |  |
|------------------------------|-----|-----|-----------------|-----------------|--|
| BD2                          | BD1 | BD0 | Modbus          | CANopen         |  |
| OFF                          | OFF | OFF | 115200          | 1 M             |  |
| OFF                          | OFF | ON  | 57600 (default) | 500 K (default) |  |
| OFF                          | ON  | OFF | 38400           | 250 K           |  |
| OFF                          | ON  | ON  | 19200           | 125 K           |  |
| ON                           | OFF | OFF | 9600            | 100 K           |  |
| ON                           | OFF | ON  | 4800            | 50 K            |  |
| ON                           | ON  | OFF | 2400            | 50 K            |  |
| ON                           | ON  | ON  | 1200            | 50 K            |  |


| Drives's ID number selection |     |     |     |     |     |     |             | Node Id # |
|------------------------------|-----|-----|-----|-----|-----|-----|-------------|-----------|
| ID6                          | ID5 | ID4 | ID3 | ID2 | ID1 | ID0 | Node Id #   |           |
| OFF                          | OFF | OFF | OFF | OFF | OFF | OFF | Not allowed |           |
| OFF                          | OFF | OFF | OFF | OFF | OFF | ON  | 1 (default) |           |
| OFF                          | OFF | OFF | OFF | OFF | ON  | OFF | 2           |           |
| OFF                          | OFF | OFF | OFF | OFF | ON  | ON  | 3           |           |
| OFF                          | OFF | OFF | OFF | ON  | OFF | OFF | 4           |           |
| OFF                          | OFF | OFF | OFF | ON  | OFF | ON  | 5           |           |
| OFF                          | OFF | OFF | OFF | ON  | ON  | OFF | 6           |           |
| OFF                          | OFF | OFF | OFF | ON  | ON  | ON  | 7           |           |
| OFF                          | OFF | OFF | ON  | OFF | OFF | OFF | 8           |           |
| OFF                          | OFF | OFF | ON  | OFF | OFF | ON  | 9           |           |
| OFF                          | OFF | OFF | ON  | OFF | ON  | OFF | 10          |           |
| OFF                          | OFF | OFF | ON  | OFF | ON  | ON  | 11          |           |
| OFF                          | OFF | OFF | ON  | ON  | OFF | OFF | 12          |           |
| OFF                          | OFF | OFF | ON  | ON  | OFF | ON  | 13          |           |
| OFF                          | OFF | OFF | ON  | ON  | ON  | OFF | 14          |           |
| OFF                          | OFF | OFF | ON  | ON  | ON  | ON  | 15          |           |
| OFF                          | OFF | ON  | OFF | OFF | OFF | OFF | 16          |           |
| OFF                          | OFF | ON  | OFF | OFF | OFF | ON  | 17          |           |
| OFF                          | OFF | ON  | OFF | OFF | ON  | OFF | 18          |           |
| OFF                          | OFF | ON  | OFF | OFF | ON  | ON  | 19          |           |
| OFF                          | OFF | ON  | OFF | ON  | OFF | OFF | 20          |           |
| OFF                          | OFF | ON  | OFF | ON  | OFF | ON  | 21          |           |
| OFF                          | OFF | ON  | OFF | ON  | ON  | OFF | 22          |           |
| OFF                          | OFF | ON  | OFF | ON  | ON  | ON  | 23          |           |
| OFF                          | OFF | ON  | ON  | OFF | OFF | OFF | 24          |           |
| XX                           | XX  | XX  | XX  | XX  | XX  | XX  | .....       |           |
| ON                           | ON  | ON  | ON  | ON  | ON  | ON  | 127         |           |

# Display Status

## Operational statuses and their signals

|            |   |
|------------|---|
| C          | Missing Operating System: no software application stored on drive   |
| C          | Firmware update: Updating of new software in progress.  |
| I          | Initialization: the drive executes the start-up procedure (a few seconds after the start-up procedure has begun). |
| S          | Correct functioning   |
| +1         | Voltage of the DC bus near to the limit value (minimum or maximum)  |
| +3         | Drive temperature is near to the maximum value  |
| +7         | EEprom near Write Overrun   |
| +8         | EEprom near End of Life   |
| S flashing | Enable OFF, current zero  |
| I flashing | I <sub>nominal</sub> not computed   |
| E3         | Error: expired e3PLC software trial   |
| +0         | Security intervention of watchdog   |
| +1         | Internal Software Error   |
| +2         | Missing calibration values  |
| +3         | Management EEPROM   |
| +4         | EEPROM fail   |
| +6         | Error: e3PLC application error  |
| +7         | Error: EEPROM Write Overrun   |
| +U         | Error: Feature Unavailable  |
| +0         | Open motor phases   |
| +1         | Over/under voltage  |
| +2         | Over current on the motor output  |
| +3         | Over temperature of the drive;  |
| +5         | Missing Torque Enable ("Missing Safe Torque Off")   |
| +6         | Drive Over Power Protection and /or Current Regulation out of range   |
| +7         | e3PLC User Protection (generated by setting bit #0 of e3PLC_User_Settings)  |
| +8         | Motor feedback error  |


## Power & Logic Supply connections

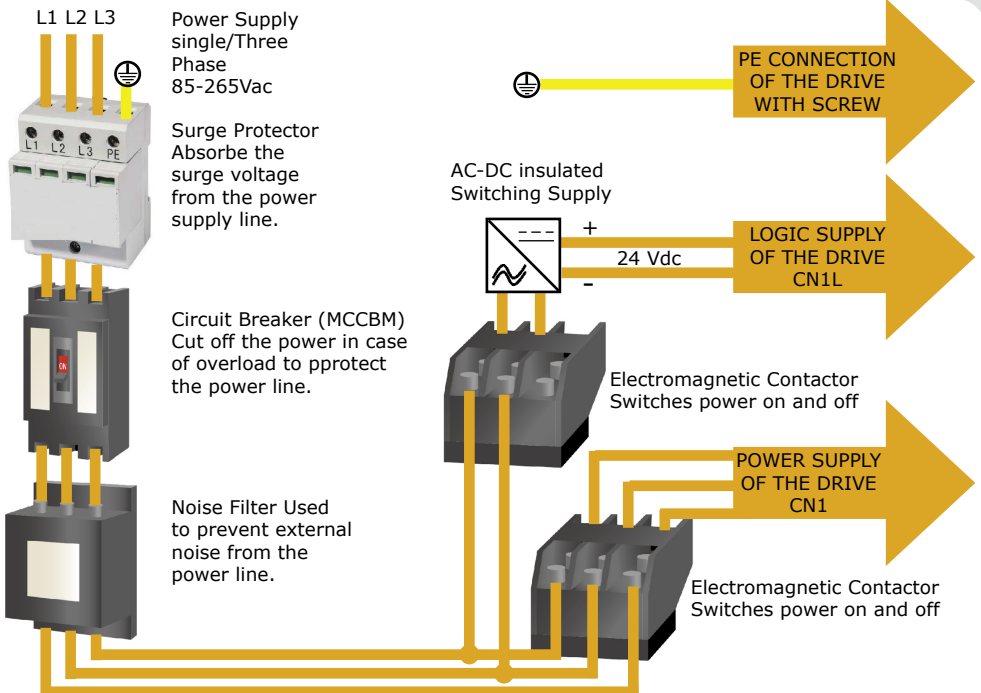

## Absolute Encoder input connection

(Maximum supply current 100mA)


Differential 5Vdc digital inputs that meet the RS422 standard.

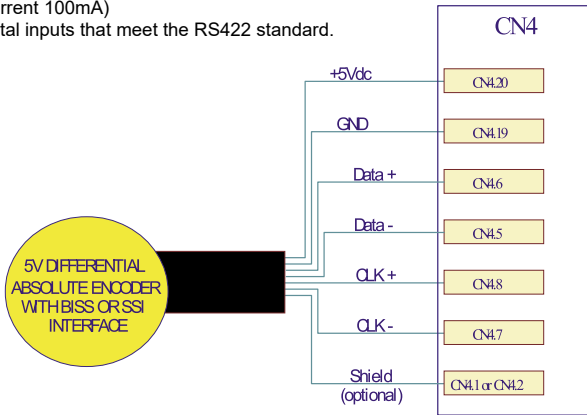


## Incremental Encoder input connection

(Maximum supply current 100mA)

Differential 5Vdc digital inputs that meet the RS422 standard.

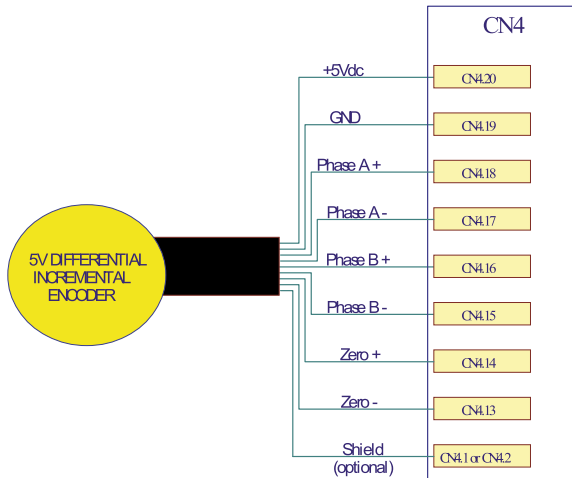


Single-Ended 5Vdc TTL/CMOS digital inputs

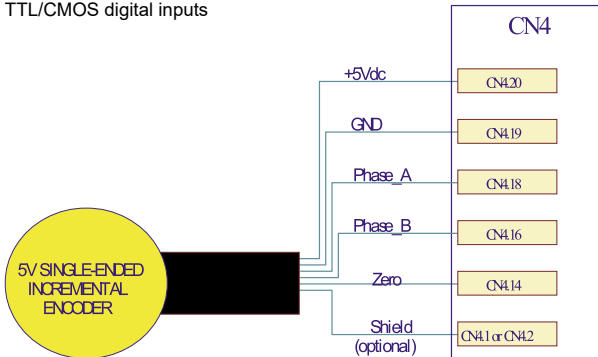


## Hall signals input connection

(Maximum supply current 100mA)  
Single-Ended 5Vdc TTL/CMOS digital inputs

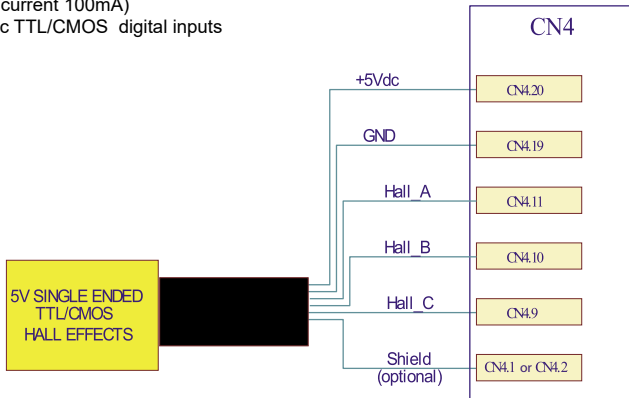


## Incremental encoder output connection

Outputs reports the used interface for encoder input: Differential or Single-Ended.  
Differential 5V digital outputs that meets RS422 standard.

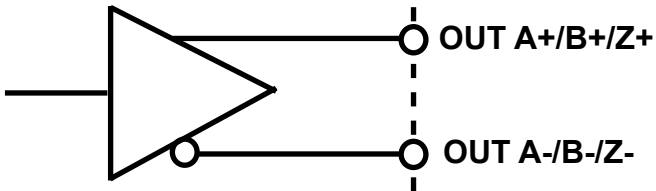

## Safe Torque Off inputs (STO)

2 terminals, 24V compatible (optoisolated)

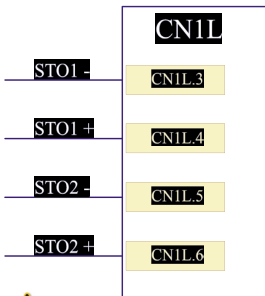

| STO1          | STO2          | Drive Status | Motor Status     |
|---------------|---------------|--------------|------------------|
| +24Vdc        | +24Vdc        | Enable       | SW controlled    |
| +24Vdc        | Not connected | Disable      | Stop for inertia |
| Not connected | +24Vdc        | Disable      | Stop for inertia |
| Not connected | Not connected | Disable      | Stop for inertia |



**STO inputs are optoisolated, shall not be used the same 24Vdc of logic supply for their connection.**

### Safety specifications

| Safety function        | Category               | STO   | Safe Torque Off                           |
|------------------------|------------------------|---|---|
|                        | Performance Level      | 4   | In accordance with EN ISO 13849-1         |
|                        | Safety Integrity Level | PLe   | In accordance with EN ISO 13849-1         |
|                        |                        | SIL3  | In accordance with EN ISO 13849-1 table 3 |
| DCavg [%]              |                        | 99  | Average Diagnostic Coverage               |
| PFHD [1/h]             |                        | 6.44 x 10 <sup>-9</sup>   | Probability of dangerous failure per hour |
| T Service Life [Years] |                        | 20  | In accordance with EN ISO 13849-1         |
| Type test              |                        | The STO function has been certified by an independent testing body. |   |




Refer to the "Safety Manual\_STO on SW5-AW5 Series" for more details of the Safe Torque Off function characteristics.



# Safe Torque Off inputs (STO)

Principle of operation:

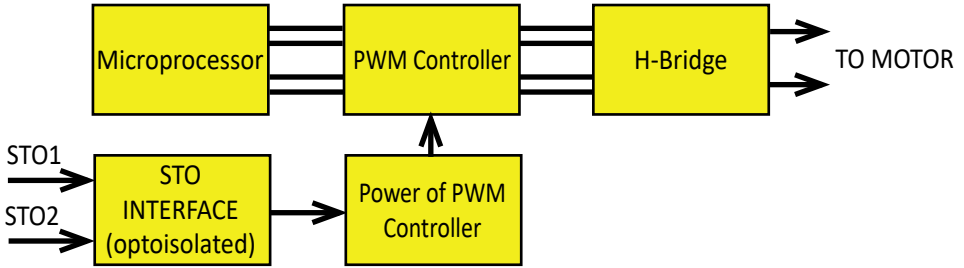

The drive has a safety feature that is designed to provide the Safe Torque Off (STO) function. Two input signals are provided which, when not connected, prevent the upper and lower devices in the PWM outputs from being operated by the digital control core. This provides a positive OFF capability that cannot be overridden by the control firmware, or associated hardware components. When both STO signals are activated (current is flowing in the input diodes of the optocouplers), the control core will be able to control the on/off state of the PWM outputs.



If not using the STO feature, both signals must be connected to a 24Vdc supply in order to enable the drive.



If a drive in operation mode is disabled by STO signal, it immediately finishes producing torque but the motor continues to run by inertia until it can stop.

## Braking Resistor connection

Internal circuit drives external braking resistor when the mechanical energy of the motor is converted back into electrical energy that must be dissipated before it charges the internal capacitors to an overvoltage condition.

Cut-In Voltage +DC\_BUS > 390 Vdc : output is on, external braking resistor is dissipating energy

Drop-Out Voltage +DC\_BUS < 380 Vdc : output is off, regen resistor not dissipating energy

Tolerance ±2 Vdc for either Cut-In or Drop-Out voltage

DC Bus Capacitance : 750uF

| Input voltage | Energy Absorption Capacity of the DC Bus |
|---------------|--|
| 120Vac        | 46.24 joules                             |
| 230Vac        | 17.36 joules                             |

- INTERNAL RESISTOR

**CN7.2 and CN7.3 MUST be connected with the jumper bar (as default).**

**CN7.1 MUST remain disconnected when the internal braking resistor is used.**


The drive is equipped with an internal braking resistor of 47Ω 50W (drive mounted on appropriate heatsink).

In some applications, the internal regeneration resistor might not be enough to absorb all foldback current. In these cases, a larger wattage regeneration resistor needs to be connected externally, to prevent drive from over voltage warnings.

- EXTERNAL RESISTOR

**Before connecting an external braking resistor you MUST disconnect the jumper bar placed between CN7.2 and CN7.3.**

**CN7.3 MUST remain disconnected when an external braking resistor is used.**

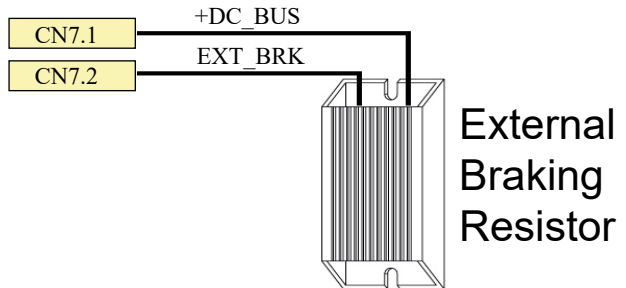

External braking resistor must be placed more than 50mm from the drive on nonflammable and heat resistant surfaces. The metal case of the braking resistor can reach high temperatures. Take all necessary measures to avoid possible contacts in the final installation.




+DC\_BUS is a High-Voltage circuit (up to 400Vdc) so take all necessary measures to avoid possible contacts in the final installation.

## Digital inputs connection

### Digital input connection (B0\_IN0 to B0\_IN3)

**i** Differential PNP, NPN and Line Driver type.

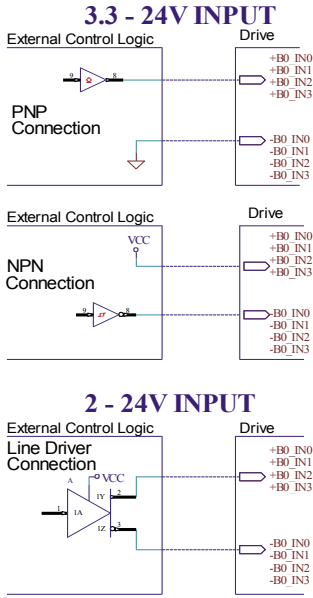

| B0_IN0 and B0_IN1           |                     |      |      |
|-----------------------------|---------------------|------|------|
| Characteristics             | MIN.                | MAX. | Unit |
| Supply voltage              | 2 <sup>(1)</sup>    | 24   | Vdc  |
| Inputs frequency            | --                  | 10   | kHz  |
| Threshold switching voltage | 1.61 <sup>(1)</sup> | --   | Vdc  |
| Current at 2 Vdc            | --                  | 2.53 | mA   |
| Current at 3.3 Vdc          | --                  | 5.84 | mA   |
| Current at 5 Vdc            | --                  | 6.28 | mA   |
| Current at 24 Vdc           | --                  | 8.75 | mA   |

| B0_IN2 and B0_IN3           |                     |      |      |
|-----------------------------|---------------------|------|------|
| Characteristics             | MIN.                | MAX. | Unit |
| Supply voltage              | 2 <sup>(1)</sup>    | 24   | Vdc  |
| Inputs frequency            | --                  | 500  | kHz  |
| Threshold switching voltage | 1.61 <sup>(1)</sup> | --   | Vdc  |
| Current at 2 Vdc            | --                  | 2.53 | mA   |
| Current at 3.3 Vdc          | --                  | 5.84 | mA   |
| Current at 5 Vdc            | --                  | 6.28 | mA   |
| Current at 24 Vdc           | --                  | 8.75 | mA   |

<sup>(1)</sup> N.B.: it's recommended to use 2 Vdc digital inputs only in differential Line-Driver configuration to have more noise immunity.

### Digital inputs connection (B1\_IN0 to B1\_IN7)


**i** Single-Ended PNP, NPN, Push-Pull

N.B.: All these inputs must be connected with the same configuration (PNP, NPN or Push-Pull).

| Characteristics             | MIN. | MAX. | Unit |
|-----------------------------|------|------|------|
| Supply voltage              | 5    | 24   | Vdc  |
| Inputs frequency            | --   | 250  | Hz   |
| Threshold switching voltage | 2,5  | --   | Vdc  |
| Current at 5 Vdc            | --   | 2    | mA   |
| Current at 24 Vdc           | --   | 12   | mA   |


### Digital inputs connection (B0\_IN8 to B0\_IN11)

**i** Single-Ended PNP, NPN, Push-Pull

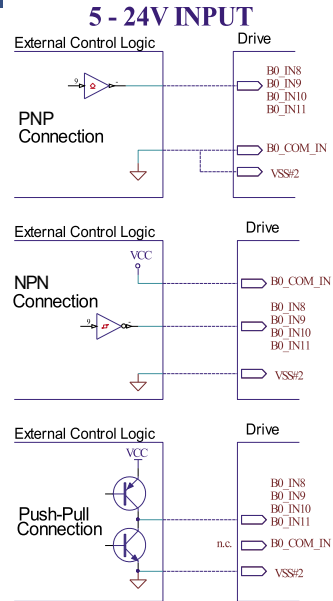

| Characteristics             | MIN. | MAX. | Unit |
|-----------------------------|------|------|------|
| Supply voltage              | 5    | 24   | Vdc  |
| Inputs frequency            | --   | 100  | kHz  |
| Threshold switching voltage | 2    | --   | Vdc  |
| Current at 5 Vdc            | --   | 2    | mA   |
| Current at 24 Vdc           | --   | 12   | mA   |


N.B.: All these inputs must be connected with the same configuration (PNP, NPN or Push-Pull).

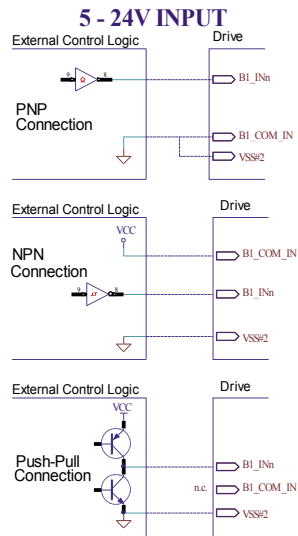

# Digital outputs connection


## Digital outputs connection (B0\_OUT0 and B0\_OUT1)

**i** PNP with  $V_{OUTmax}=24Vdc$ ,  $I_{OUTmax}=100mA$ ,  $F_{max} = 500KHz$

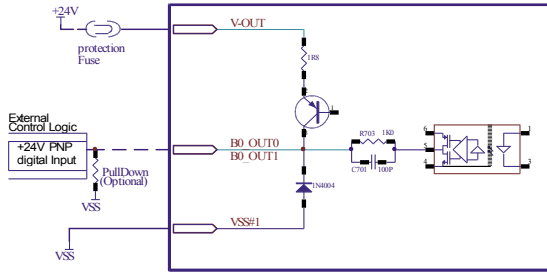


## Digital outputs connection (B0\_OUT2)

**i** PNP with  $V_{OUTmax}=24Vdc$ ,  $I_{OUTmax}=1.3A$ ,  $F_{max} = 1KHz$

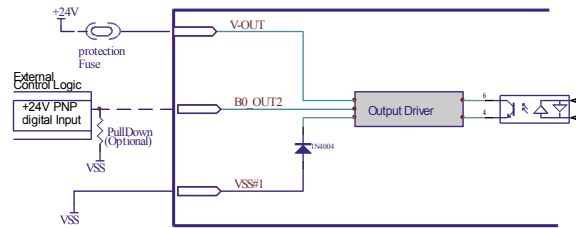


## Digital outputs connection (B0\_OUT3)

**i** PNP with  $V_{OUTmax}=24Vdc$ ,  $I_{OUTmax}=500mA$ ,  $F_{max} = 1KHz$

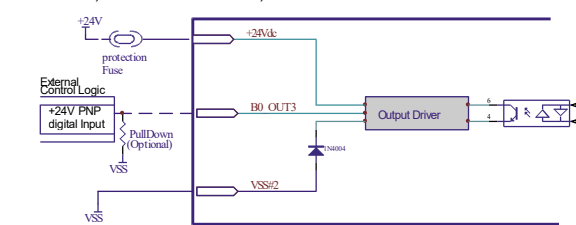

## Digital outputs connection (B1\_OUT0 and B1\_OUT7)

**i** PNP with  $V_{OUTmax} = 24Vdc$ ,  $I_{OUTmax} = 100mA$ ,  $F_{max} = 250Hz$

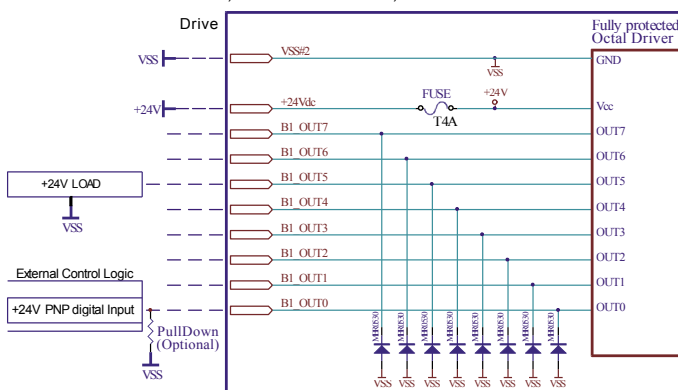


## Analog inputs connection




Isolated configurable analog inputs. The resolution of the analog inputs depends from the type of the connection which could be defined by software: differential or potentiometer.

### Differential connection

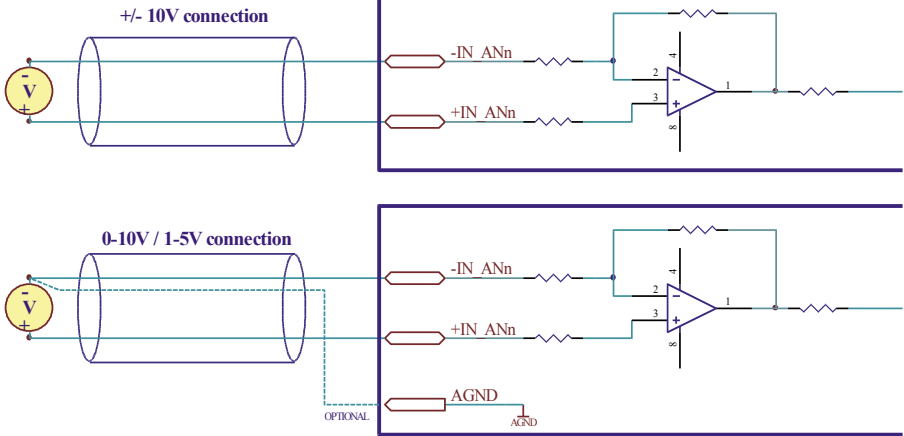


### Potentiometer connection

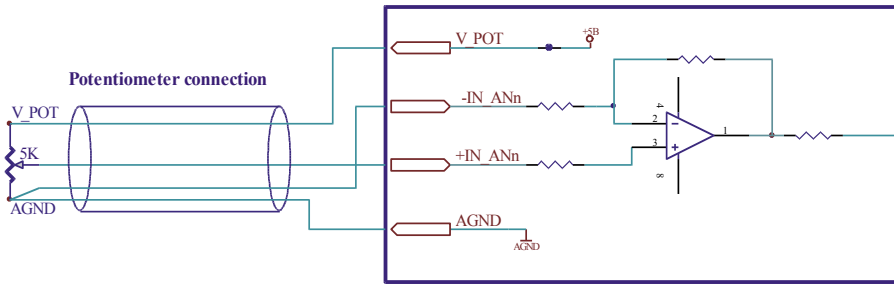

## Analog outputs connection



0-10V isolated analog outputs.

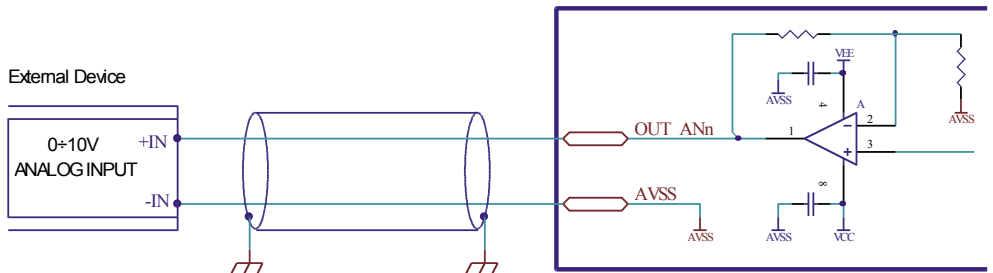

## UL regulation requirements

In order to comply with cURus certification according to the UL 61800-5-1 standard, the following requirements must be met:



### Earting system

IT or TN (not corner earthed).

The drive shall be considered only for use in system voltage where the maximum voltage between the ungrounded conductors and ground does not exceed 150 V

### Maximum length of the cables

| CABLE                    | LENGHT        |
|--------------------------|---------------|
| AC Power Supply          | No limitation |
| 24VDC Logic Supply & STO | No limitation |
| Motor                    | < 30m         |
| Feedback                 | < 30m         |
| Input & Output           | < 30m         |
| Fieldbus                 | < 30m         |

### Motor and braking resistor cables must be shielded

### Fuses on AC Power Supply

In the final installation use only Cooper Bussmann FWX-20 A14F fast fuses on AC bus with 20Arms of current, 250Vac voltage and interrupt rating 200KA or any equivalent UL Listed or UL Recognized External Semiconductor Fuses, on condition that these fuses have the same ratings of the above fuse in particular with "Peak-let-trough-current I<sub>p</sub>" and "Clearing I<sub>2t</sub>".

### Discharge time of the capacitors on the AC power supply



CAUTION – Risk of Electric Shock


Time required for the discharge of the capacitors after the removal of the AC power supply: 4 minutes.

### Dissipation



To reach the maximum performances with 100% of duty cycle, the drive shall be fixed on the side to an aluminum heat-sink with dimension of 330x305 mm with 5 mm in thickness and with an external R/C Fans, Electric (GPWV2/8) with an Air flow rate minimum of 50 m<sup>3</sup>/h positioned on the bottom side of the device like indicated in the picture above.

Use with a smaller aluminum heat-sink and a lower Fan Air Flow shall be taken into consideration in the end-use application.

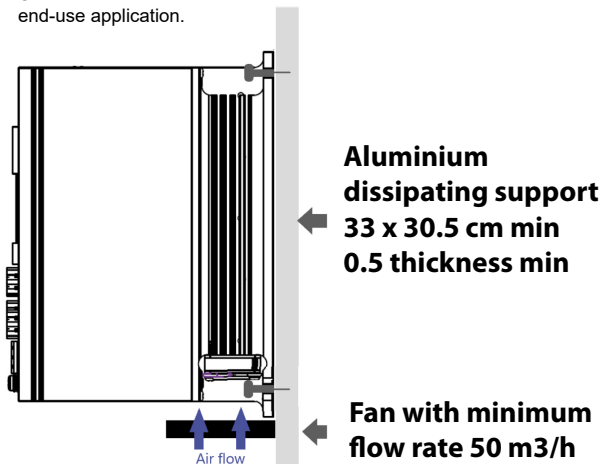

## Mating connectors

| Connector   | Description  |
|-------------|--|
| CN1         | Phoenix 1762208 (Green) or 1759509 (Black)               |
| CN1L        | Phoenix 1790111 (Green) or 1708329 (Black)               |
| CN2         | Phoenix 1786187 (Green) or 1701895 (Black)               |
| CN3         | Phoenix 1790153 (Green) or DFMC 1,5/ 7-ST-3,5 BK (Black) |
| CN4         | Phoenix 1844691  |
| CN10        | Phoenix 1790218 (Green) or DFMC 1,5/13-ST-3,5 BK (Black) |
| CN11        | Phoenix 1790237 (Green) or 1812542 (Black)               |
| CN5A / CN5B | RJ45 8 positions   |

## Section of the cables

| Function                          | Cable  |                             |
|-----------------------------------|--|-----------------------------|
|                                   | Minimum  | Maximum                     |
| Power supply and PE               | 0.5 mm <sup>2</sup> (AWG20)                          | 2.5 mm <sup>2</sup> (AWG12) |
| Motor output                      | 0.5 mm <sup>2</sup> (AWG20)                          | 2.5 mm <sup>2</sup> (AWG12) |
| Feedback                          | 0.12 mm <sup>2</sup> (AWG26)                         | 0.5 mm <sup>2</sup> (AWG20) |
| Logic supply and Inputs / Outputs | 0.5 mm <sup>2</sup> (AWG20)                          | 1.3 mm <sup>2</sup> (AWG16) |
| Communication interfaces          | Min. 0.25 mm <sup>2</sup> (AWG23) CANbus CiA-CANOpen |                             |

## Verify the installation

- Check all connection: power supply, logic supply, STO inputs and inputs/outputs
- Make sure all settings right for the application.
- Make sure the power supply is suitable for the drive.
- If possible, remove the load from the motor shaft to avoid that wrong movements cause damage.
- Enable the current to the motor and verify the applied torque.
- Enable a movement of some steps and verify if the rotation direction is the desired one.
- Disconnect the power supply, connect the load on the motor and check the full functionality.

## Analysis of malfunctions



*When one of the following situations occur, the drive doesn't function correctly and it is reported an error.*

| DEFECT                                      | CAUSE   | ACTION  |
|---|---|---|
| The external fuse to the drive burns        | May be due to a wrong connection of the power supply.   | Adjust the connection and recover the fuse. Use a fuse suitable for the application.                |
| Over temperature protection.                | May be due to a duty cycle                              | Increase the air flux and if it is possible chose a motor with higher torque at same current value. |
| Over current protection.                    | May be due to a short circuit on the motor power stage. | Shut down the power supply and check if the motor is damaged  |
| Noisy motor movement with vibrations.       | May be caused due to a state of resonance.              | Increase the resolution of the step angle and/or change the motor velocity to avoid resonance area  |
| The motor produce torque but doesn't rotate | May be caused due to a wrong connection of the I/O's.   | Check the connection of the I/O's   |

**Ever Motion Solutions**

Via del Commercio, 2/4 - 9/11

Loc. San Grato Z. I

26900 - L O D I - Italy

Phone +39 0371 412318 - Fax +39 0371 412367

email: infoever@everelettronica.it

web: www.everelettronica.it

